

## AIM-Kit1

### General

CRC16 Soft  
CRC32 Hard  
CRC32 Soft  
Flash  
Resources  
SHA1 Hard  
SHA1Soft  
STM32 Std...  
SteppingMotor AIM-Kit1  
Svc Core  
Svc Library  
SysDelay  
SysIRQ  
SysRTC  
SysTick  
Syscall null  
Syscall UART  
TryCatch no  $\mu$ RTS  
TryCatch  $\mu$ RTS  
Variables SC

### $\mu$ RTS

$\mu$ RTS Core  
 $\mu$ RTS Core GDBServer PC  
 $\mu$ RTS Debugger PC  
 $\mu$ RTS Library

### Communication

GPRS Management  
I2C Master  
I2C Master  $\mu$ RTS  
ModBusRS Client  
Modem  
MSC\_FS  
MSC\_HS  
SDCard  
SDInterface\_SPI  
SDInterface\_SDIO  
SMS  
SPI  
UART

## AIM-Kit1

### **AGILIA AgCore**

Agilia Core  
Agilia StrFormat  
Agilia String  
Agilia TryCatch  
Agilia Variables

### **AGILIA Services**

Service GPRS  
Service GwCore 16 BPP  
Service ModBusRS Client  
Service RTC  
Service SDCard  
Service SMS  
Service SPI  
Service SteppingMotor AIM-Kit1  
Service STM32 Encoder  
Service STM32 Hbridge  
Service STM32 PWM  
Service STM32  
Service UART  
Service Variables SC

### **AGILIA Drivers**

Agilia Com. AIM-Link  
Driver no DMA  
Driver DMA  
DRVG\_Template  
ILI9341-AIM-Kit1  
Sound Null  
Sound AIM-Kit1  
Touch Null  
Touch STME811 Bus  
Sound Template  
Touch Template